TH-2250-VF

Installation Instructions

telehook™

Flat Screen Wall Mount | Fixed

Important Notes

- The Telehook 2250 Wall Mount supports Flat Panel Displays from 20″ (50cm) to 37″ (94cm) and supports a maximum load of 50kgs (110lbs).
- This product only supports VESA compliant displays with 100mm x 100mm (4″x4″), 100mm x 200mm (4″x8″) and 200mm x 200mm (8″x8″) mounting hole patterns.
- The manufacturer does not accept responsibility for incorrect installation.

Component Checklist

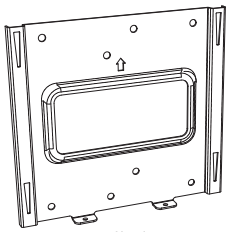

Wall Plate

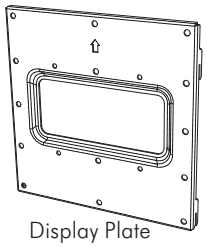

Display Plate

Bits Bag

Coach Screw (x4)

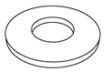

Large Washer (x4)

Masonry Wall Plug (x4)

Dry Wall Anchor (x4)

Spacer Bush (x6)

Mounting Screws

M6x12mm & M6x20mm Phillips Head Screw (x6 each)

M5x12mm & M5x20mm Phillips Head Screw (x6 each)

M4x12mm & M4x20mm Phillips Head Screw (x6 each)

TOOLS REQUIRED:

- Power Drill
- 10mm or 6mm Drill Bit
- Phillips Head Screw Driver
- Spirit Level
- Socket Wrench or Shifter

Ⓐ Mounting the Wall Plate

Masonry Wall

Note: Ensure the Wall Plate is mounted with the arrow cut out pointing upwards.

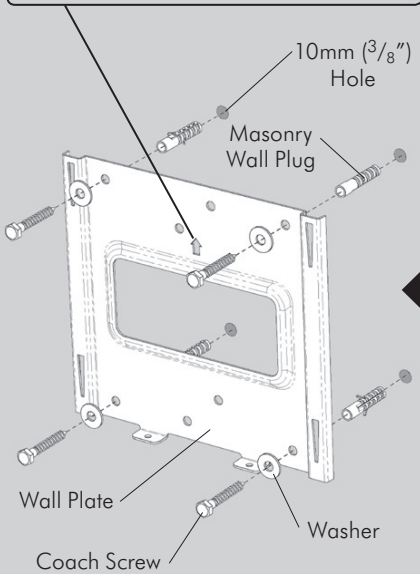

TIP: Use a spirit level to ensure the wall plate is horizontal

OR

Timber Stud Wall

Note: Ensure the Wall Plate is mounted with the arrow cut out pointing upwards.

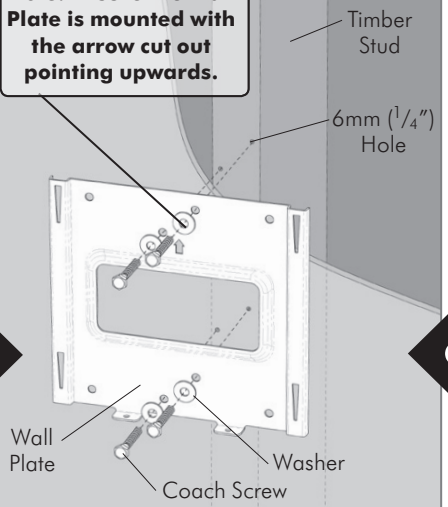

TIP: Use a spirit level to ensure the wall plate is horizontal

Use a stud finder to accurately locate the centre of the stud. Ensure that all four screws fix securely into the stud

OR

Dry Wall

Note: Ensure the Wall Plate is mounted with the arrow cut out pointing upwards.

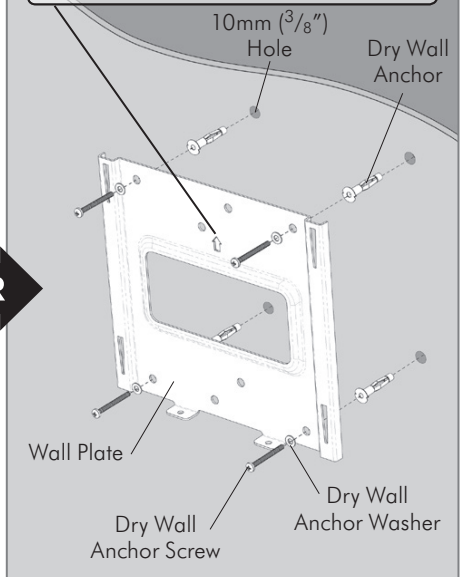

TIP: Use a spirit level to ensure the wall plate is horizontal

Ⓑ Mounting the Display Plate

Note: When attaching the Display Plate to the back of the display, ensure that the arrow cut out in the Display Plate is pointing towards the top of the display

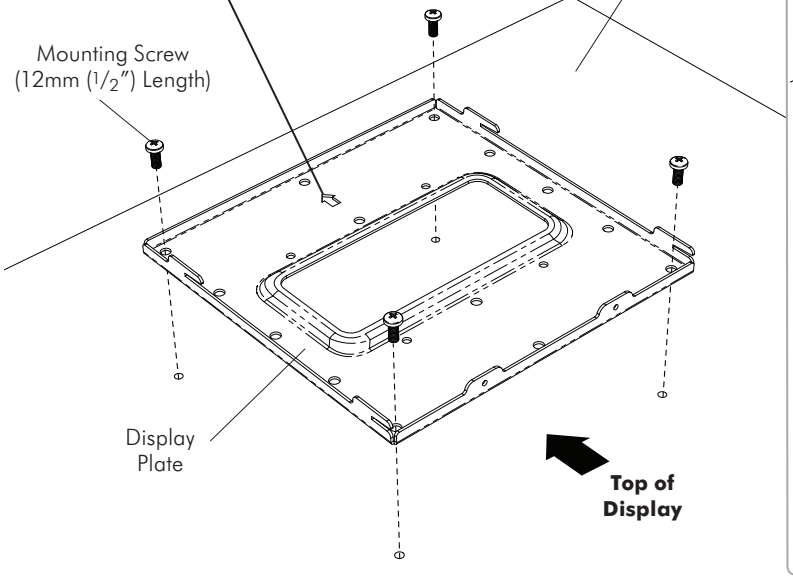

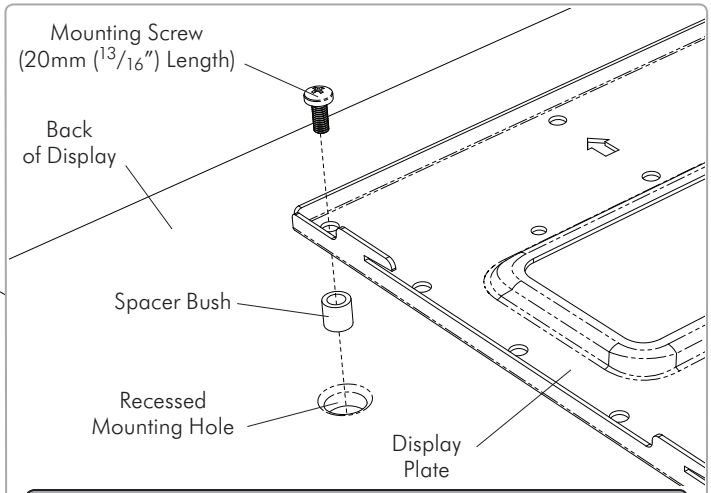

Recessed Mounting Holes

If the mounting holes are recessed into the back of the display, use the supplied Spacer Bushes to pack the recessed holes. Ensure that the correct 20mm length mounting screws are used to securely fix the plate to the display.

Ⓒ Attaching the Display to the Wall Plate

With the Display Plate attached to the display, lift the display and hook the plate through the four corresponding mounting holes in the Wall Plate as shown.

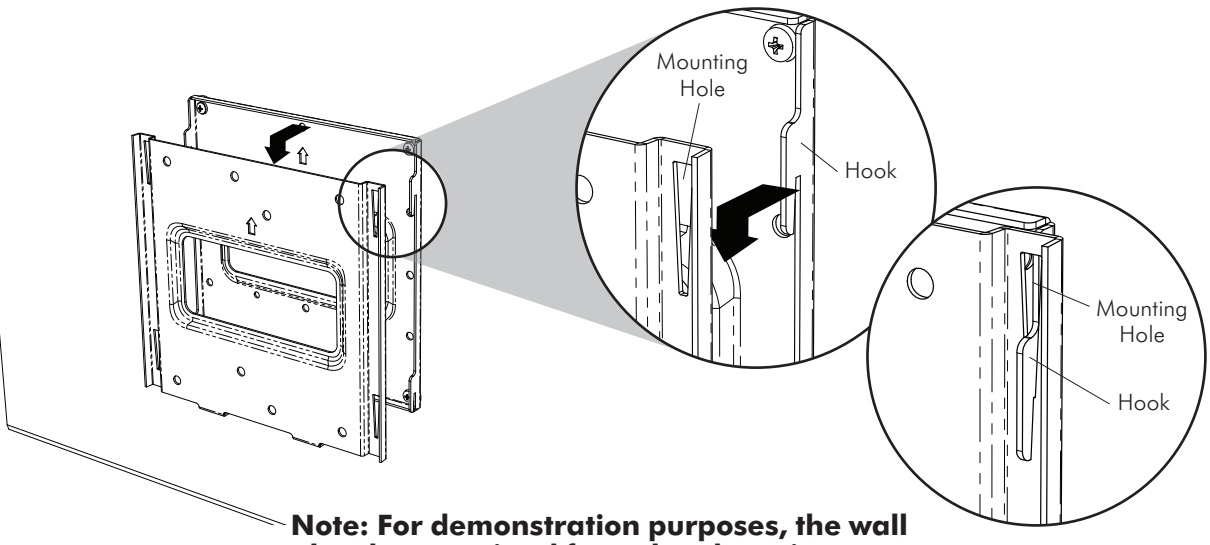

Note: For demonstration purposes, the wall has been omitted from the above image.

Ⓓ Security Option

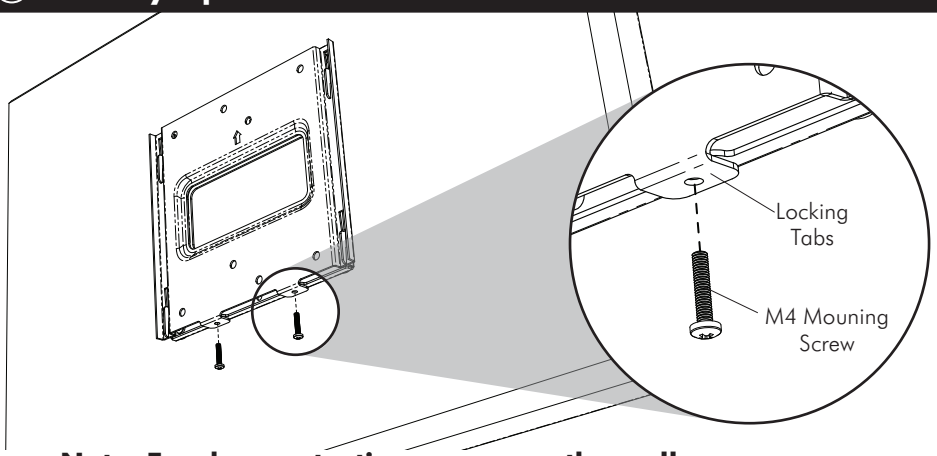

To properly secure the display to the wall it is recommended to use two of the supplied M4 mounting screws to securely attach the two plates together.

Note: For demonstration purposes, the wall has been omitted from the above image.

Due to continuing product development, the manufacturer reserves the right to alter specificationswithout notice. Published: 06.05.09 ©